


Magellan Scanner/scale config for KwickPOS 0925

Use blue headed cable (Part #: 90A052121) connect the scale from host port(blue) to the serial port on windows terminal computer. (tested on 9800i and 9300)

1. set to single cable mode 2. factory reset 3. set baud rate, data bit etc.

1. set to single cable mode: a. Enter programming mode b. Single Cable c. Exit

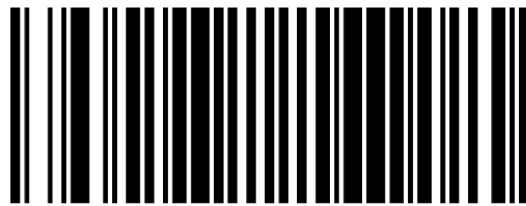

Enter/Exit Programming Mode

Only scan once. If scanned twice, scale will reboot and need to do it again.

-----Fold-----



Interface Type = RS-232 Single Cable

After exit programming mode, scale will reboot. After that, proceed to step 2.


2. Scan factory reset:



RETURN TO FACTORY SETTINGS

Wait for scale to reboot. Then proceed to step 3.

3. set baud rate etc.
 - a. Enter programming mode
 - b. Scan Settings code
 - c. Exit

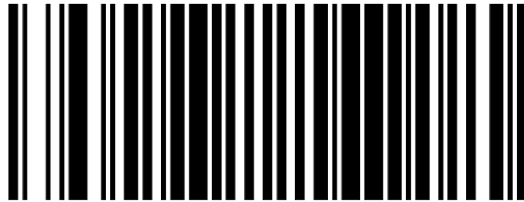

Enter/Exit Programming Mode

Only scan once. If scanned twice, scale will reboot and need to do it again.

-----Fold-----



RS-232 Baud Rate = 9600



RS-232 Number of Data Bits = 7



RS-232 Parity = Even

After Exit programming mode, scale will reboot. Then it is ready.